Ⅰ.Installation Notice

1. Install water supply lines in accordance with this manual.
2. Floor drain should be installed in the location of the faucet.
3. Install the faucet only after the completion of house interior decoration in case paint or other chemicals erode the faucet surface.
4. Clean pipes to get rid of mud, sand or other debris blocked in pipes.
5. Wrap the thread part with Teflon tape before it is screwed. To avoid damage to the faucet, use a piece of cloth as a pad between the wrench mouth and the faucet. (Check whether the threads can be matched. Otherwise, too strong force applied to the wrench will damage the faucet).
6. After installation, check all the joints to make sure they are firmly connected. Then keep water flow. Turn on and off repeatedly to ensure there is no leakage around the joints. At this stage, the product is ready for normal use.
7. Keep the manual to the user.

Ⅱ.Operation Notice

1. The product is used between water pressure 0.05~1.0MPa, water temperature 0~90°C.
2. Do not hang heavy things on the faucet.
3. Make sure the faucet is off when no water comes out of it (especially when nobody resides in the house or during the period of decoration or the absence of water).
4. Regularly clean the surface of faucet in neutral wash solution. Then dry it with a piece of soft cotton cloth to keep it bright.
5. When the room temperature drops to below 0°C, take necessary measures (such measures as keeping faucet warm and closing windows) to prevent the faucet from being frozen and even broken (especially when windows kept open for air ventilation while nobody resides in).
6. First turn on cold water, then hot water. To avoid scalding, regulate the water temperature before washing or showering and do not touch the faucet of hot water part.
7. Do not disassemble the product unless you are an expert.

■ Installing Steps

1. As specified in diagram I, drill four holes on the floor in accordance with the inlet base. Fix the inlet base on the floor with the anchors.
2. Install the cold and hot supply lines on the floor and connect to the inlet base. Pay attention that the hot water supply on the left and the cold water supply on the right.
3. Screw the caps onto the inlet bases and tighten them. Turn on the water supply to keep the pressure for two hours. Ensure there is no leakage.

Attention: As the product is a built-in valve, before ceramic tiles are stuck on the wall, keep water flow to test the endurance of water pressure in case leakage occurs.

4. Unscrew the caps from the inlet bases, put the plastic protection sheath to pave the ceramic tiles on the floor.
5. Take off the plastic protection sheath, put the escutcheons on the supporting rods, and insert the inner rods into the relevant holes of the inlet bases and tighten the supporting rods.
6. Fix the supporting rods, adjust the outlet adapters to ensure screw threads in parallelism. Connect the faucet body and tighten it with connecting nuts.
7. Install the spout and fix it with setscrew.
8. Connect the shower hose and handshower, turn on water for inspection.

■ Diagram

Diagram I

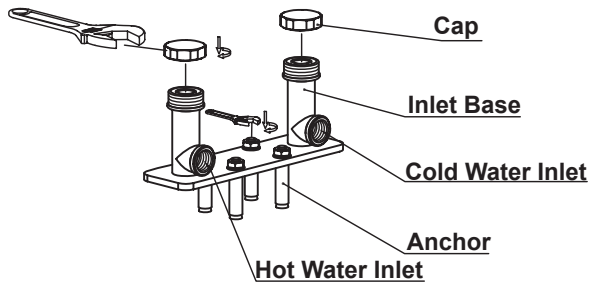

Diagram II

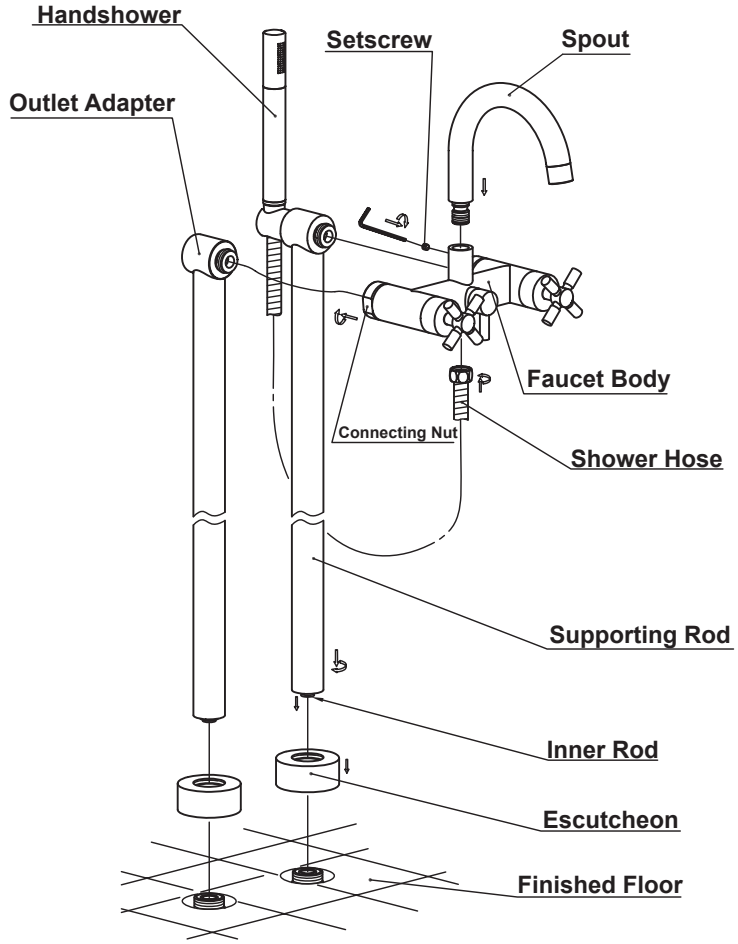

* The installation diagram is only for reference and subject to the real objects.

BS01050906.ZX